

NIL

Cleaning of jet nozzles

How to find and clean jet nozzles of NIL flushers

NIL

1. Piston with jet nozzle



Find jet nozzle and check, if blocked by lime deposits or dirt particles.

3. Piston and cleaning needle



Place cleaning needle in front of jet nozzle.

2. Cleaning needle



Remove dirt particles from surface of piston and prepare cleaning needle to clean jet nozzle.

4. Cleaning of jet nozzle



Put cleaning needle in and out a few times to fully clean the jet nozzle and to remove all blockings.

Friedrich Gampper KG • Metallwarenfabrik

71534 Murrhardt • P.O. Box 1164 • Phone +49 (0) 7192 / 971 - 0 • Fax 971 - 105
Internet: www.nil-gampper.de • e-mail: info@nil-gampper.de